JumpSeat® 90 Assembly Instructions

sediasystems

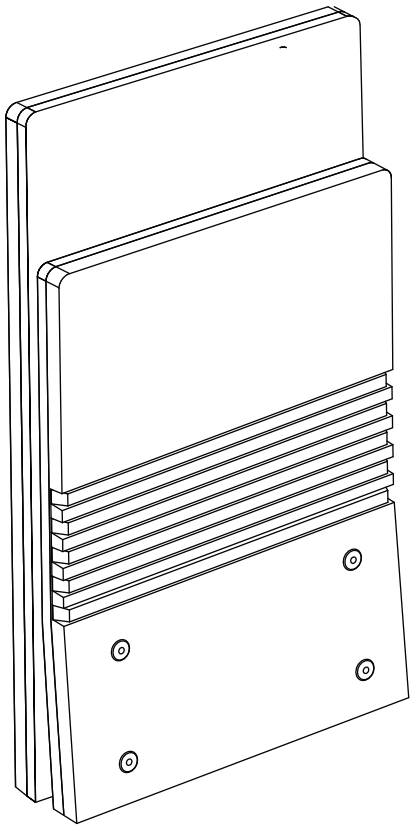

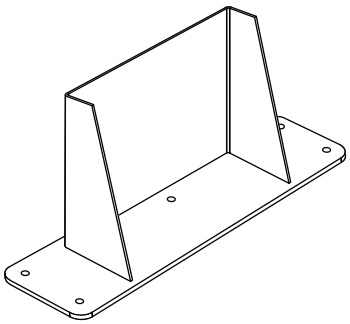

TOOLS REQUIRED

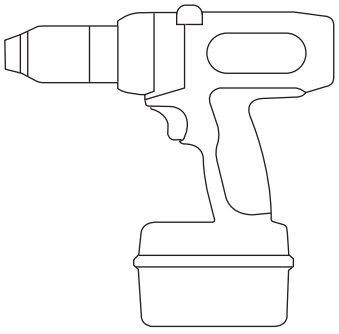

Drill



Level



Carpet Punch

CONCRETE



1/4"



7/16"

WOOD

15/64"



1/2"

HARDWARE INCLUDED

CONCRETE

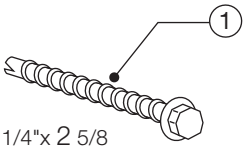

1/4"x 2 5/8

WOOD

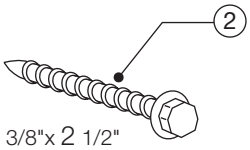

3/8"x 2 1/2"

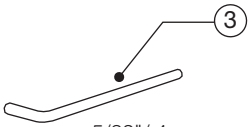

5/32"/ 4mm
Allen Wrench

JumpSeat® 90 Assembly Instructions

sediasystems

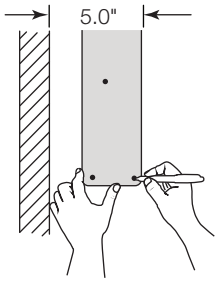

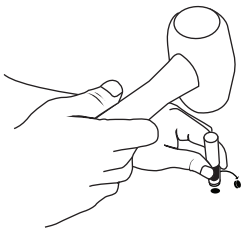

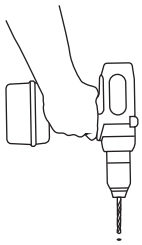

CONCRETE

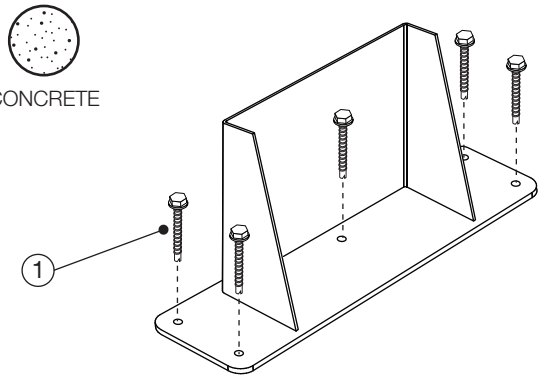

WOOD

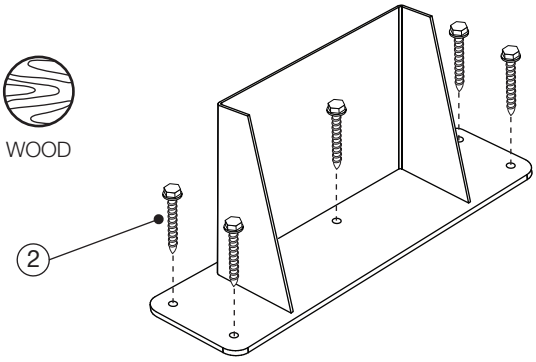

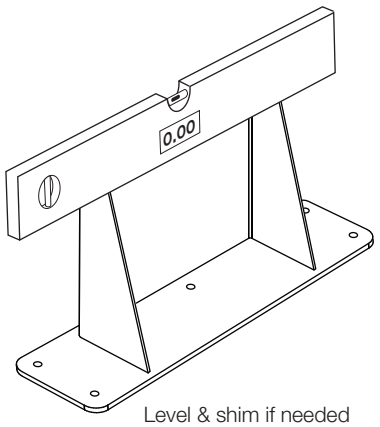

Level & shim if needed

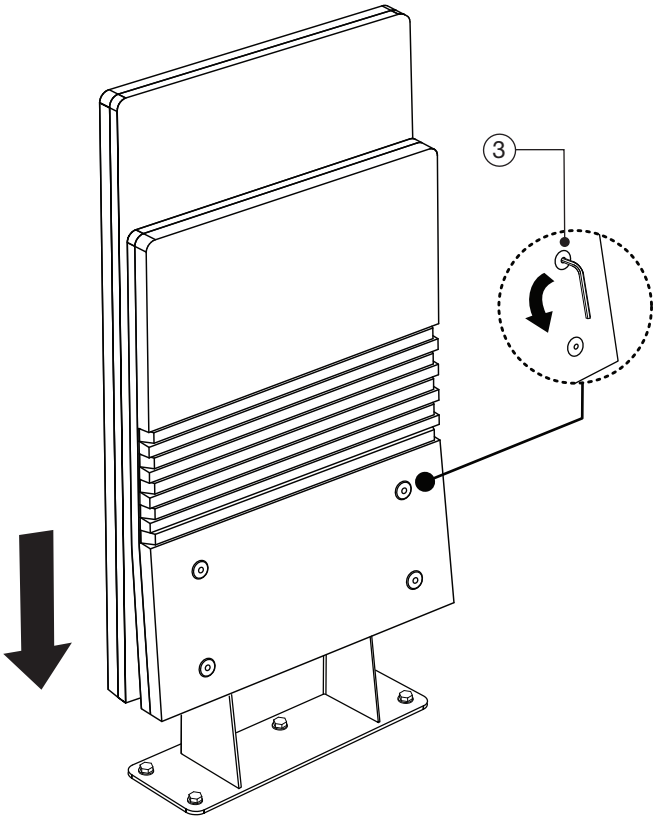

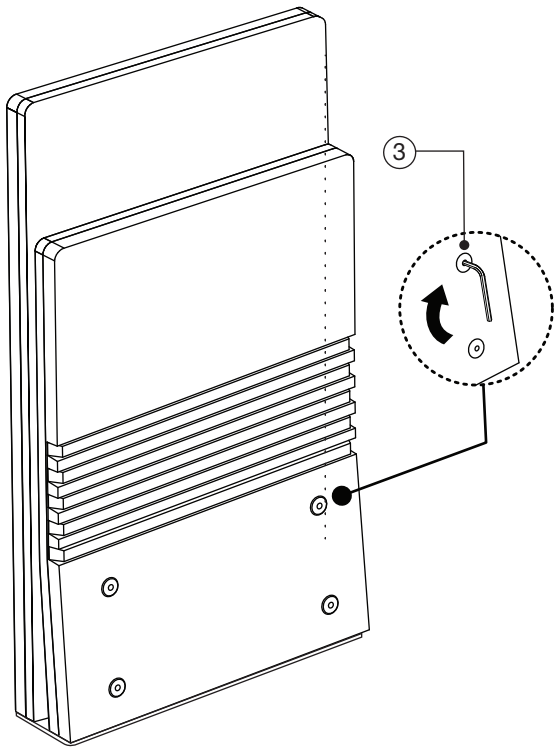

JumpSeat® is a trademark of Aria Enterprises, Inc. used under license by Sedia Systems, Inc.

Patents: www.sediasystems.com/patents

866.892.6130 www.sediasystems.com

sediasystems

© 2019 Sedia Systems Inc. Printed on FSC certified recycled paper.

SSAUJ90819